


Step 1


Check if you have everything

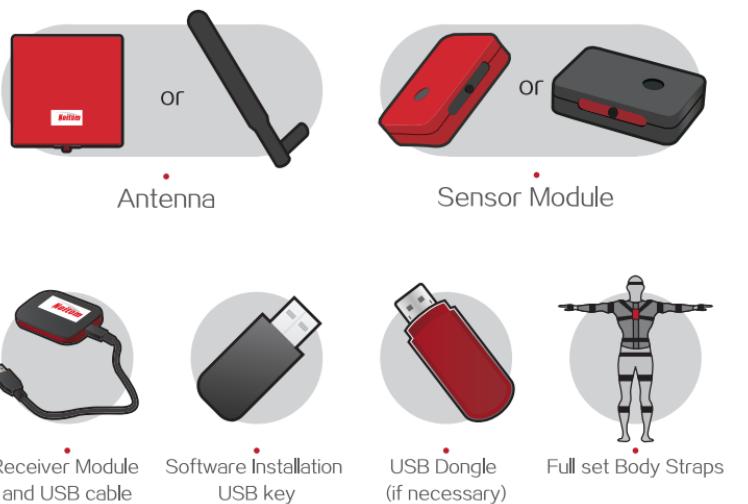

Step 2

Prepare working environment

- Install trueMotion® Software
- Install USB device driver
- Plugin Receiver Module via USB cable

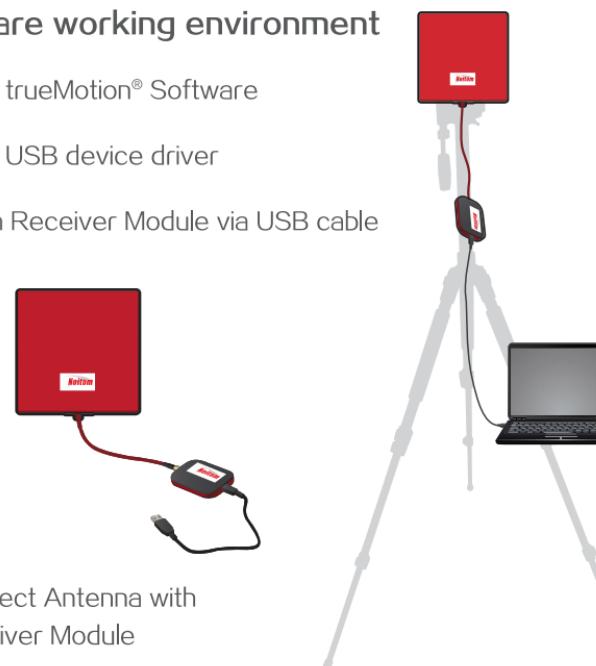

- Connect Antenna with Receiver Module

Step 3

• Turn on all Sensor Modules




• Put Sensor Modules on Body Straps
according to its number



Step 4


• Put Body Straps on

Hip	01
Right Upper Leg	02
Right Leg	03
Right Foot	04
Left Upper Leg	05
Left Leg	06
Left Foot	07
Right Shoulder	08
Right Arm	09
Right Forearm	0A
Right Hand	0B
Left Shoulder	0C
Left Arm	0D
Left Forearm	0E
Head	10
Vertebra	11

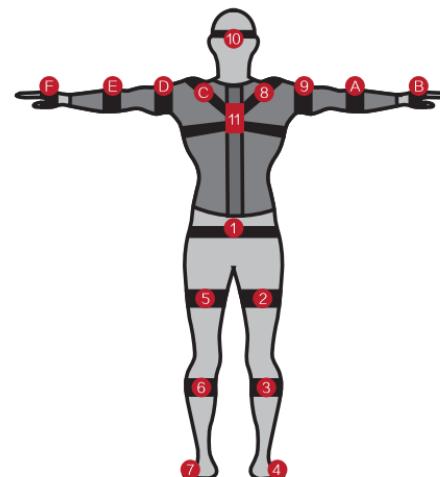


• Step 5

- Startup trueMotion® Software
- Connect device
- Load nearest body size data

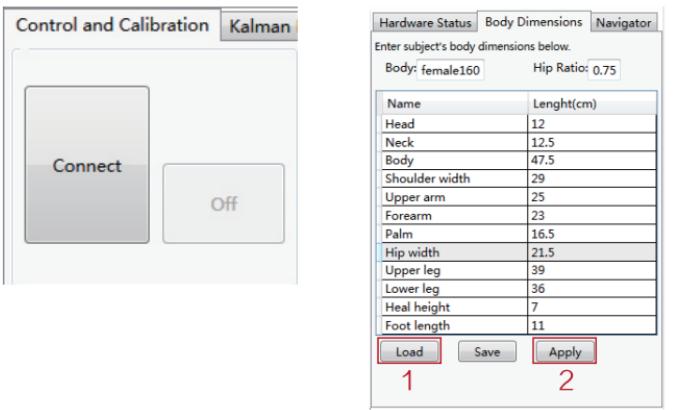

• Step 6

- Perform a three-step calibration

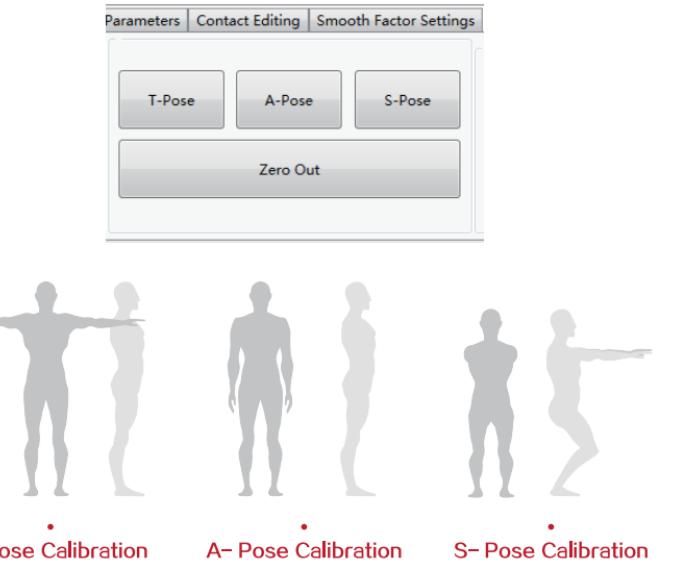

- Check your real-time mocap animation now

www.noitom.com



A NOITOM PRODUCT

